



Water
Filters
AUSTRALIA




Filter Change

HiFLOW

In-Line Mains Water Filter System


Cartridge Removal

1

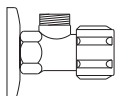

Turn OFF water supply at isolation valve

2

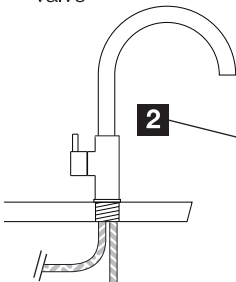

Turn ON cold water mains tap to release pressure

3

Turn old cartridge with 90° anti-clockwise twist and pull away from the Filter Head Assembly

4

Dispose of used filter cartridge thoughtfully


Cartridge Replacement

1




To engage the new cartridge push new cartridge up into the Filter Head Assembly and then turn with 90° clockwise twist

2

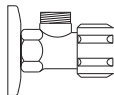

Turn ON water supply at isolation valve

3

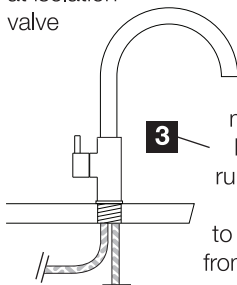

Turn ON cold mains tap Let water run for **3-5 minutes** to purge air from system

4

Turn Mains Tap OFF and check for leaks

"there's Simply no Separate Tap"

HiFLOW FILTER QUICK CHANGE INSTRUCTIONS



Water Filters Australia Pty Limited.
Unit 11, 26 Wattle Road, BROOKVALE. NSW 2100 Australia.
PO Box 636. FRESHWATER. NSW 2096 Australia.

T +61 2 9905 6211
E info@hiflowfilter.com.au

F +61 2 9905 6255
W www.hiflowfilter.com.au

